


Instructions for Micro-Trak Liquid Systems

Used with TOPCON Controllers

(x-20 with 30-S ECU)

1. Install system components and harnessing per general instruction manual (Micro-Trak P/N 17633).
2. See attached system diagram and wiring diagram for TOPCON-specific harnessing.
3. **FLOW CALIBRATION:**
Under the Sensors tab select Sensor Specifications. Select the Calibration Factor and enter the Flow Cal value from the flowmeter tag and add a check mark in the Micro-Trak Flow Sensor box.
4. Under the Tanks tab select Settings then under Control Mode select Micro-Trak.

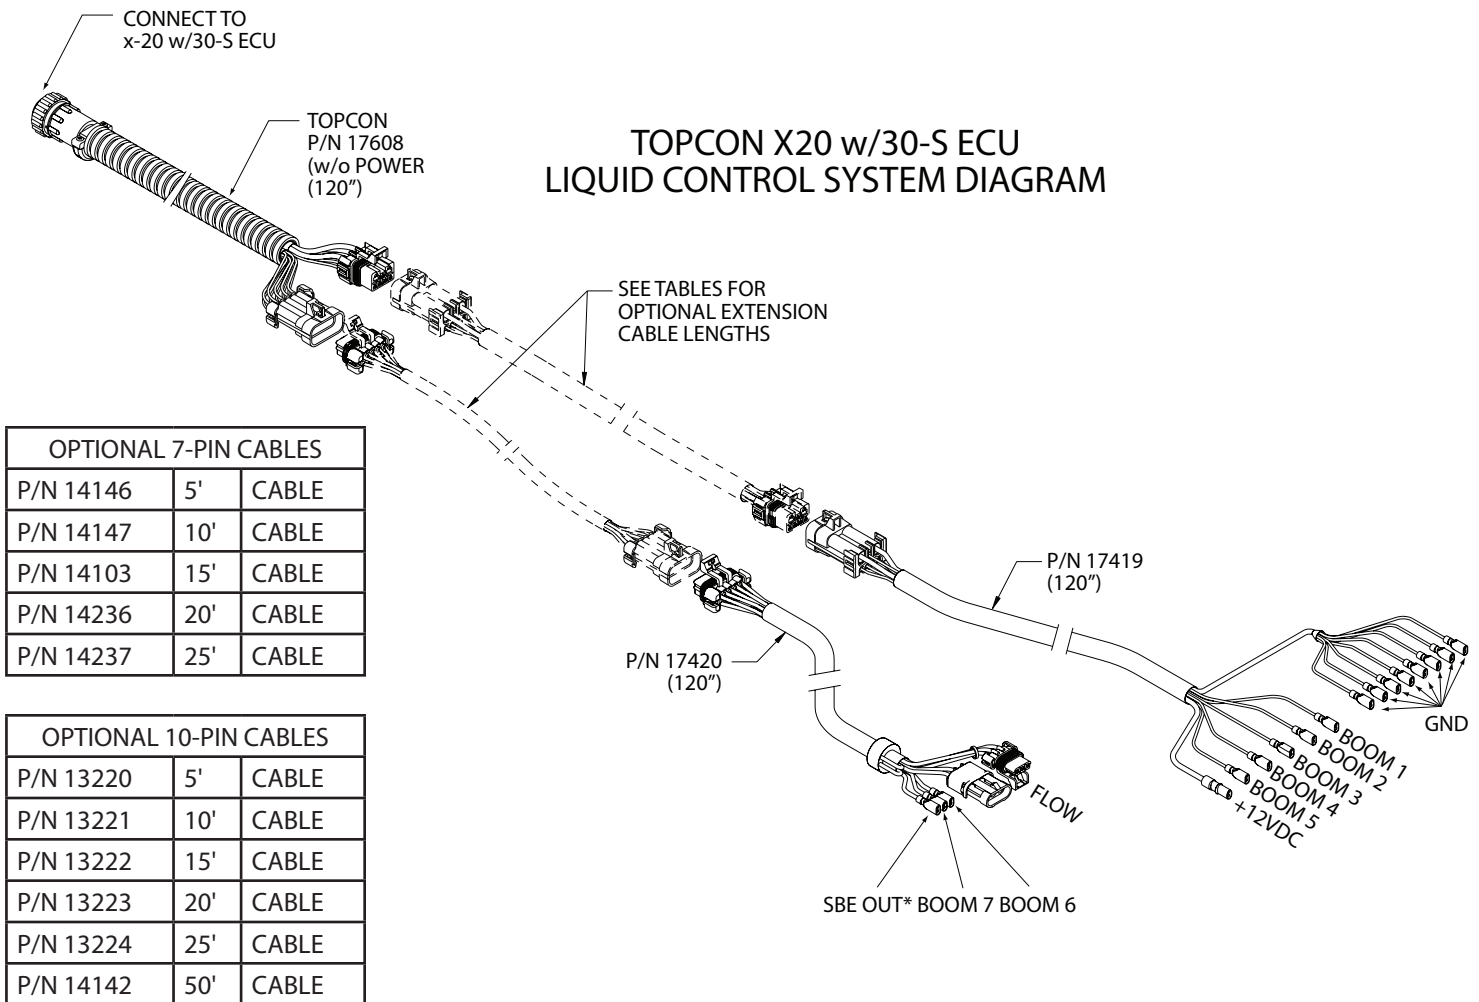



Instructions for Micro-Trak Liquid Systems

Used with TOPCON Controllers - (cont)

(x-20 with 30-S ECU)

